

T-Touch 503

TERMOSTATO TOUCH SCREEN DA PARETE

**WALL INSTALLATION**

- Fix the **BASE** to the wall using screws and plugs type "B" (Fig.6)
- Make the electrical connections (Fig.1, Fig.2).


3 Fix the **FRONT** piece to the **BASE** using the "A" screws (Fig.6).

ATTENTION: AVOID EXCESSIVE TIGHTENING SO AS NOT TO DEFORM THE FRONT PIECE.


Now the T-Touch 503 thermostat is ready to be powered and to receive the **LID** (Paragraph: POWER SUPPLY).**POWER SUPPLY**

Two 1,5 AAA Alkaline batteries supply power to the thermostat.

They guarantee a period of operation of at least 2 years (in the STANDBY mode).

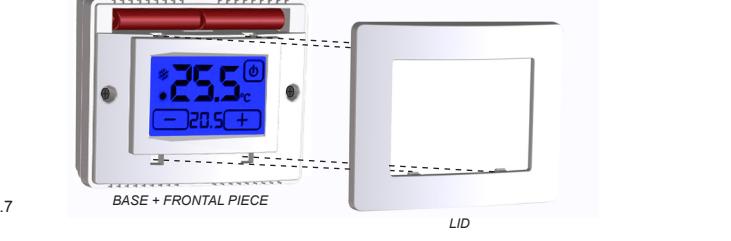
Batteries can be inserted easily in the compartment under the **LID** by observing the polarity shown on the plastic part (Fig.7).**SWITCHING ON/RESET**

After inserting the batteries and starting the **RESET** the thermostat carries out a control cycle by switching on all segments of the display and activating the load within a few seconds (Fig.8). The **PROGRAMMING** interface (Fig.9) is shown and, after a few seconds, the thermostat goes over to the **STANDBY ON** (Fig.10) phase.

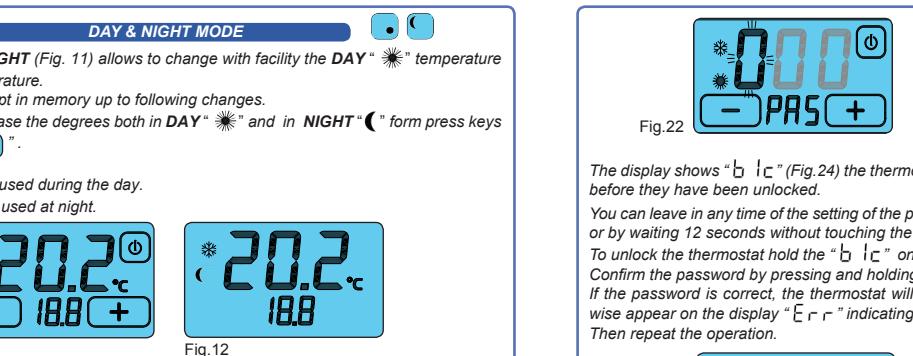For the **RESET** function it is first necessary to activate the **SUMMER / WINTER** key.To activate the **SUMMER / WINTER** key press for about 2 seconds the display on the **DETECTED TEMPERATURE** (Fig.10).The **RESET** function is activated by pressing the keys simultaneously: and or and .

The function **DAY & NIGHT** (Fig.11) allows to change with facility the **DAY** temperature with **NIGHT** temperature. The degrees set are kept in memory up to following changes. To increase or to decrease the degrees both in **DAY** and in **NIGHT** form press keys or .


DAY MODE It is used during the day.
NIGHT MODE it is used at night.

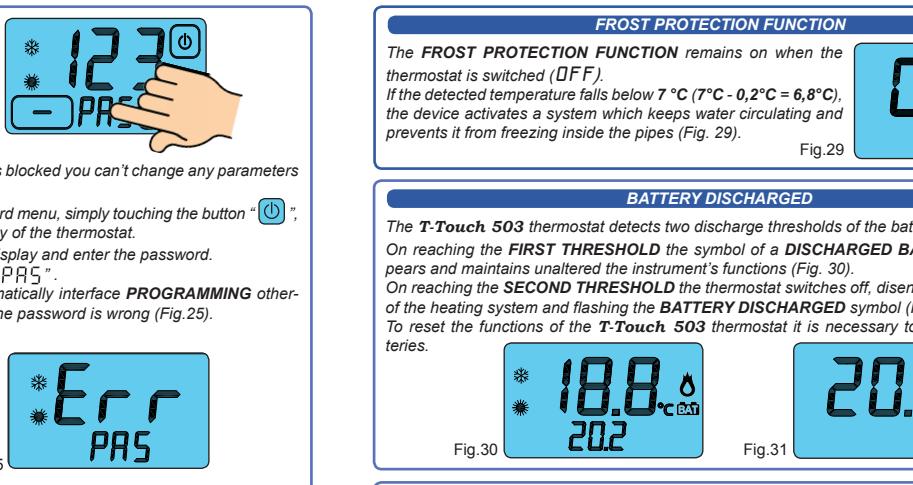

The display shows (Fig.24) the thermostat is blocked you can't change any parameters before they have been unlocked. You can leave in any time of the setting of the password menu, simply touching the button or by waiting 12 seconds without touching the display of the thermostat.


To unlock the thermostat hold the on the display and enter the password. Confirm the password by pressing and holding the .

If the password is correct, the thermostat will automatically interface **PROGRAMMING** otherwise appear on the display indicating that the password is wrong (Fig.25). Then repeat the operation.

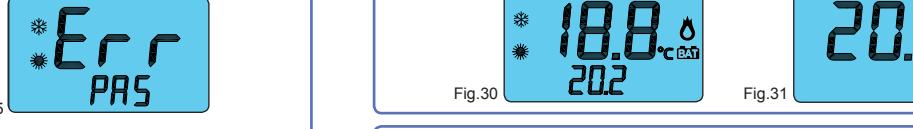

To change the operating mode, press the enabled key **DAY** or **NIGHT** .


During the **STANDBY ON** (Fig.12) phase the display will show the symbol of the set mode with its memorized temperature.

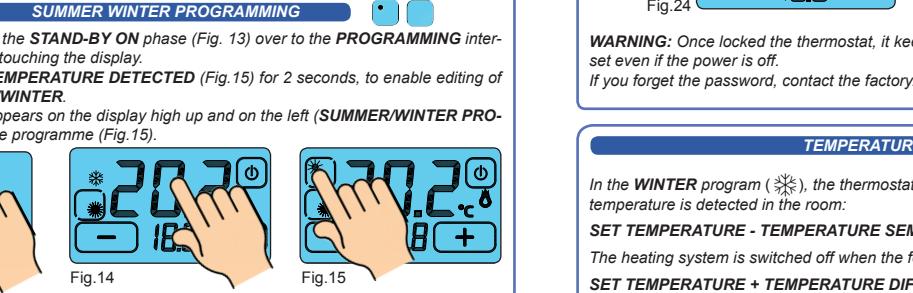

It is possible to go from the **STANDBY ON** phase (Fig.13) over to the **PROGRAMMING** interface (Fig.14) simply by touching the display.

Press the display on **TEMPERATURE DETECTED** (Fig.15) for 2 seconds, to enable editing of the program **SUMMER/WINTER**.

Press the button that appears on the display high up and on the left (**SUMMER/WINTER PROGRAMME**) to modify the programme (Fig.15).

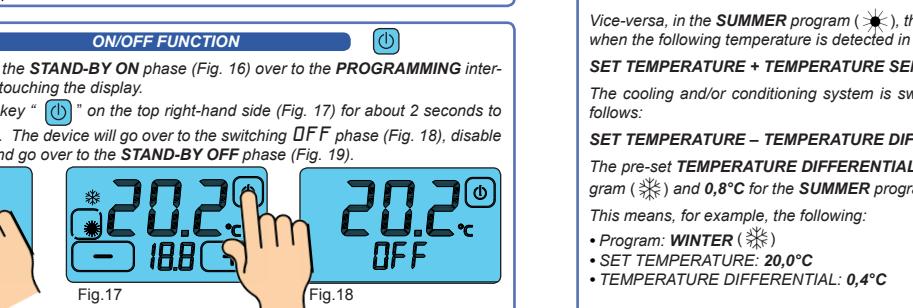

It is possible to go from the **STANDBY ON** phase (Fig.16) over to the **PROGRAMMING** interface (Fig.17) simply by touching the display.

Press the switching on key on the top right-hand side (Fig.17) for about 2 seconds to switch the device **OFF**. The device will go over to the switching **OFF** phase (Fig.18), disable the system activation and go over to the **STANDBY OFF** phase (Fig.19).

SET TEMPERATURE - TEMPERATURE DIFFERENTIAL
The pre-set **TEMPERATURE DIFFERENTIAL** in the thermostat is 0,4 °C for the **WINTER** program and 0,8°C for the **SUMMER** program .

This means, for example, the following:

 
- Program: **WINTER**
- SET TEMPERATURE: 20,0°C
- TEMPERATURE DIFFERENTIAL: 0,4°C



Before switching the thermostat **On** it is necessary to enable the switching **On** key by touching the display (Fig.19).

Keep the key pressed for about 2 seconds (Fig.20) to switch the thermostat **On** (Fig.21).


The thermostat will be set on the **PROGRAMMING** phase (Fig.17).



Press and hold for about two seconds the buttons and until on the display, appears to set the password (Fig.22).


The numbers represent the digits of the password. To change the password using the and . To move to the next digit, press and hold the digit itself. Confirm the password by pressing and holding the .

The **RESET** function is activated by pressing the keys simultaneously: and or and .

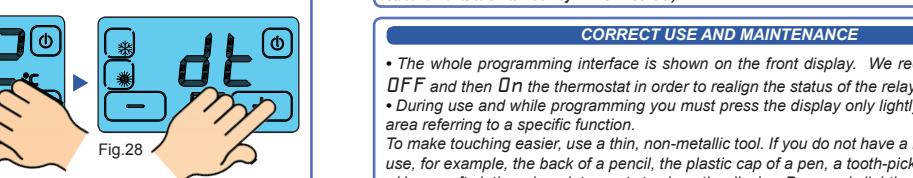


Lightly press **SET TEMPERATURE** on the display and keep it pressed for about 3 seconds to change the **TEMPERATURE DIFFERENTIAL** (dt) during the **PROGRAMMING** phase (Fig.27).

The writing will be shown on the display and the digits below will refer to the temperature differential currently set in connection with the related program (Fig.28). It is therefore possible to set the temperature differential within a range of 0,2°C÷2,0°C by pressing the following keys: or .

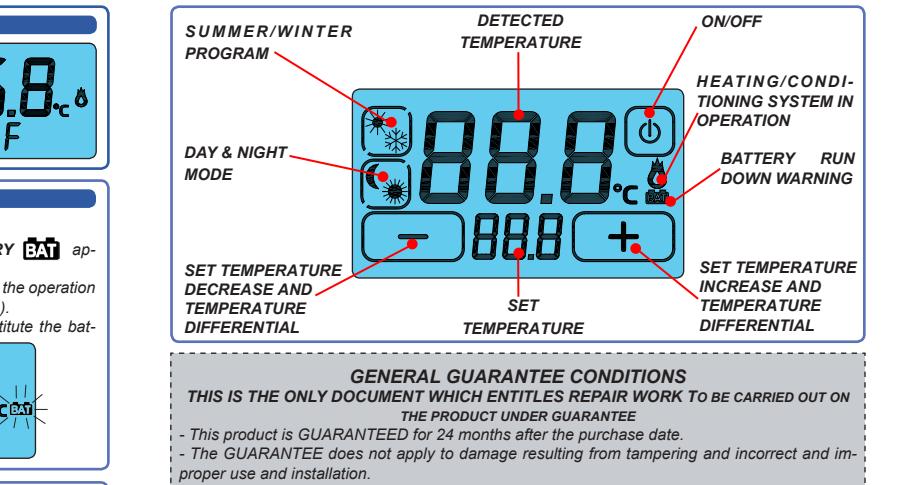

The **FROST PROTECTION FUNCTION** remains on when the thermostat is switched **(OFF)**. If the detected temperature falls below 7 °C (7°C - 0,2°C = 6,8°C), the device activates a system which keeps water circulating and prevents it from freezing inside the pipes (Fig.29).

The **T-Touch 503** thermostat detects two discharge thresholds of the batteries. On reaching the **FIRST THRESHOLD** the symbol of a **DISCHARGED BATTERY** appears and maintains unaltered the instrument's functions (Fig.30). On reaching the **SECOND THRESHOLD** the thermostat switches off, disabling the operation of the heating system and flashing the **BATTERY DISCHARGED** symbol (Fig.31). To reset the functions of the **T-Touch 503** thermostat it is necessary to substitute the batteries.

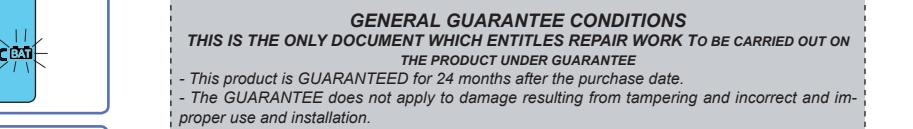


GENERAL GUARANTEE CONDITIONS
THIS IS THE ONLY DOCUMENT WHICH ENTITLES REPAIR WORK TO BE CARRIED OUT ON THE PRODUCT UNDER GUARANTEE

- This product is **GUARANTEED** for 24 months after the purchase date.
- The **GUARANTEE** does not apply to damage resulting from tampering and incorrect and improper use and installation.
- The **GUARANTEE** must be duly filled in, in order to be valid.
- In the case of defects covered by the **GUARANTEE**, the producer will repair or replace the product free of charge.

SERVICE NOT COVERED BY THE GUARANTEE:
Repair work after the expiry of the **GUARANTEE** will be charged according to the parts replaced and to the cost of labour.

COLLEGAMENTO ELETTRICO
Collegamento con bruciatore, caldaia murale, impianto di condizionamento, valvola di zona con ritorno a molla (Fig.1):

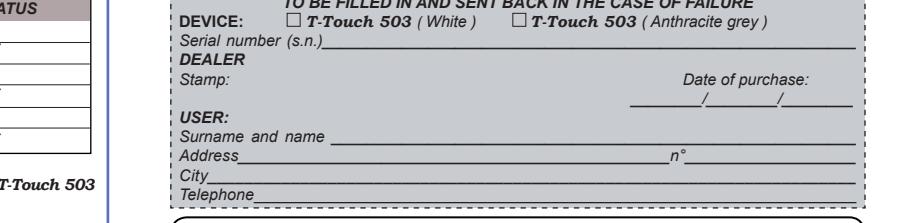

GUARANTEE CERTIFICATE
TO BE FILLED IN AND SENT BACK IN THE CASE OF FAILURE
DEVICE: T-Touch 503 (White) T-Touch 503 (Anthracite grey)
Serial number (s.n.) _____
Stamp: _____ Date of purchase: / /

USER:
Surname and name _____
Address _____ n° _____
City _____
Telephone _____

TECHNICAL CHARACTERISTICS

- Power supply: 2 x 1,5V AAA alkaline batteries.
- Autonomy (Stand-by): more than 2 years.
- No data loss if batteries are replaced within 2 minutes.
- Possibility of switching On / Off via **REMOTE contact**.

SUMMER PROGRAMME
from 15,0°C to 35,0°C in **DAY mode** , from 10,0°C to 30,0°C in **NIGHT mode** .

 
WINTER PROGRAMME
from 5,0°C to 30,0°C in **DAY mode** , from 2,0°C to 25,0°C in **NIGHT mode** .

Temperature mode:

- Automatic battery level control with 2 intervention thresholds.
- Function block via **PASSWORD**.
- Adjustment range: 0,2°C in **WINTER PROGRAMME** , 0,5°C in **SUMMER PROGRAMME** .

Adjustable maintenance range: from 0,2°C to 2,0°C (intervention interval from +0,1°C to +1,0°C)
Contact capacity: 230Vac - 5A (resistive load).
Installation: on wall or in recessed box.
Colours available: white, anthracite grey and silver.
Weight: 110gr including the batteries.
Dimensions: 114,0 x 83,0 x 23,5mm

Device for temperature regulation of class 1.
Device temperature control at the efficiency seasonal heating environment: 1% (in accordance with Directive 2010/30 / EC Regulation 811/2013 / EU).



The manufacturer firm reserves the right to make any aesthetic or functional modifications without notice and at any moment.




DESCRIZIONE GENERALE
T-Touch 503 è un termostato touch screen che Vi permette di impostare con facilità la temperatura della vostra casa.

T-Touch 503 è dotato di un display retroilluminato con visualizzazione digitale della temperatura misurata e della temperatura impostata.

T-Touch 503 permette l'impostazione di due modalità di temperatura: la temperatura GIORNO e la temperatura NOTTE .

T-Touch 503 permette il comando di impianti di riscaldamento e di condizionamento. Esso evita gli sprechi di energia azionando l'impianto di riscaldamento o condizionamento solo quando serve.

COLLEGAMENTO ELETTRICO
Collegamento con bruciatore, caldaia murale, impianto di condizionamento, valvola di zona con ritorno a molla (Fig.1):

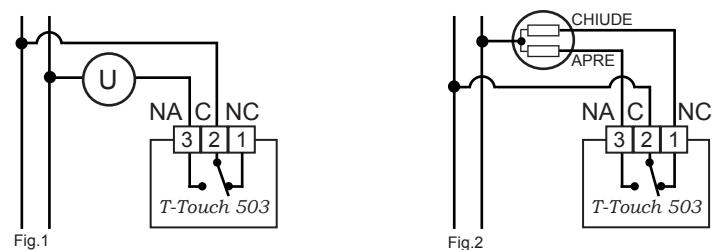

INSTALLAZIONE
T-Touch 503 può essere installato direttamente su parete o su scatola da installazione 3 moduli (scatola 503).

In entrambi i casi l'altezza consigliata è di 1,5m dal pavimento, in luogo asciutto, esente da correnti d'aria e lontano da fonti di calore. Per il fissaggio utilizzare viti e tasselli in dotazione (Fig.3).

INSTALLAZIONE SU SCATOLA 503

- Fissare la **BASE** alla **SCATOLA 503** con le viti "C" (Fig.4).
- Effettuare i collegamenti elettrici (Fig.1, Fig.2).
- Fissare il **FRONTEALE** sulla **BASE** utilizzando le viti "A" in dotazione (Fig.5).

ATTENZIONE: EVITARE UN SERRAGGIO TROPPO FORTE, POTREBBE DEFORMARE IL FRONTEALE.

Ora il termostato T-Touch 503 è pronto per essere alimentato e per ricevere l'**ANTINA** (paragrafo ALIMENTAZIONE).

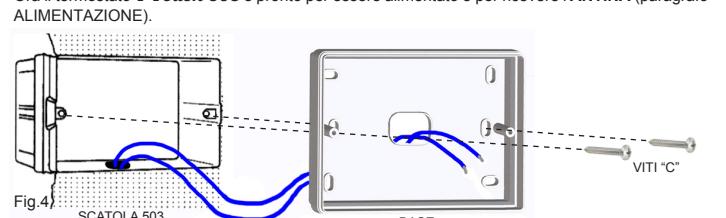


Fig.4 **Fig.5**

VITI "C"

BASE

SCATOLA 503

WEEE

geca

GECA Srl




INSTALLAZIONE A PARETE

- Fissare la BASE alla parete mediante tasselli e viti tipo "B" (Fig.6).
- Collegare elettricamente il termostato (Fig.1, Fig.2).
- Fissare il FRONTALE sulla BASE utilizzando le viti "A" in dotazione (Fig.6). Ora il termostato T-Touch 503 è pronto per essere alimentato e per ricevere l'ANTINA (paragrafo ALIMENTAZIONE).



ALIMENTAZIONE

Il termostato T-Touch 503 va alimentato con due batterie Alcaline AAA (ministilo) da 1,5V che ne garantiscono il funzionamento per almeno 2 anni (in funzionamento STAND-BY). L'inserimento delle batterie può essere facilmente effettuato nell'apposito vano situato sotto l'ANTINA seguendo la polarità indicata sulla plastica (Fig.7).

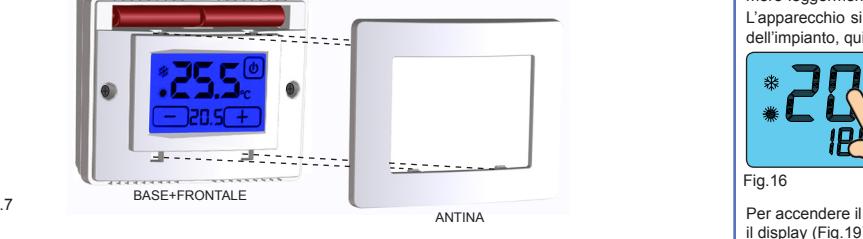

ACCENSIONE / RESET

All'inserimento delle batterie e all'avvio della funzione RESET il termostato effettua un ciclo di controllo accendendo tutti i segmenti del display e attivando il carico per pochi secondi (Fig.8). Appare quindi l'interfaccia di PROGRAMMAZIONE (Fig.9) e dopo alcuni secondi il termostato si pone nella fase di STAND-BY ON (Fig.10).



Per la funzione RESET è prima necessario attivare il tasto ESTATE/INVERNO. Per attivare il tasto ESTATE/INVERNO premere per circa 2 secondi il display sulla TEMPERATURA RILEVATA (Fig.10).

La funzione di RESET si attiva premendo contemporaneamente i tasti: e oppure i tasti e .

Fig.5
Fig.6
Fig.7

Fig.8
Fig.9
Fig.10

Fig.11
Fig.12

Fig.13
Fig.14
Fig.15

Fig.16
Fig.17
Fig.18

Fig.19
Fig.20
Fig.21

Fig.22
Fig.23
Fig.24

Fig.25
Fig.26
Fig.27
Fig.28

Fig.29
Fig.30
Fig.31

Fig.32

Fig.33
Fig.34
Fig.35
Fig.36

Fig.37
Fig.38
Fig.39
Fig.40

Fig.41
Fig.42
Fig.43
Fig.44

Fig.45
Fig.46
Fig.47
Fig.48

Fig.49
Fig.50
Fig.51
Fig.52

Fig.53
Fig.54
Fig.55
Fig.56

Fig.57
Fig.58
Fig.59
Fig.60

Fig.61
Fig.62
Fig.63
Fig.64

Fig.65
Fig.66
Fig.67
Fig.68

Fig.69
Fig.70
Fig.71
Fig.72

Fig.73
Fig.74
Fig.75
Fig.76

Fig.77
Fig.78
Fig.79
Fig.80

Fig.81
Fig.82
Fig.83
Fig.84

Fig.85
Fig.86
Fig.87
Fig.88

Fig.89
Fig.90
Fig.91
Fig.92

Fig.93
Fig.94
Fig.95
Fig.96

Fig.97
Fig.98
Fig.99
Fig.100

Fig.101
Fig.102
Fig.103
Fig.104

Fig.105
Fig.106
Fig.107
Fig.108

Fig.109
Fig.110
Fig.111
Fig.112

Fig.113
Fig.114
Fig.115
Fig.116

Fig.117
Fig.118
Fig.119
Fig.120

Fig.121
Fig.122
Fig.123
Fig.124

Fig.125
Fig.126
Fig.127
Fig.128

Fig.129
Fig.130
Fig.131
Fig.132

Fig.133
Fig.134
Fig.135
Fig.136

Fig.137
Fig.138
Fig.139
Fig.140

Fig.141
Fig.142
Fig.143
Fig.144

Fig.145
Fig.146
Fig.147
Fig.148

Fig.149
Fig.150
Fig.151
Fig.152

Fig.153
Fig.154
Fig.155
Fig.156

Fig.157
Fig.158
Fig.159
Fig.160

Fig.161
Fig.162
Fig.163
Fig.164

Fig.165
Fig.166
Fig.167
Fig.168

Fig.169
Fig.170
Fig.171
Fig.172

Fig.173
Fig.174
Fig.175
Fig.176

Fig.177
Fig.178
Fig.179
Fig.180

Fig.181
Fig.182
Fig.183
Fig.184

Fig.185
Fig.186
Fig.187
Fig.188

Fig.189
Fig.190
Fig.191
Fig.192

Fig.193
Fig.194
Fig.195
Fig.196

Fig.197
Fig.198
Fig.199
Fig.200

Fig.201
Fig.202
Fig.203
Fig.204

Fig.205
Fig.206
Fig.207
Fig.208

Fig.209
Fig.210
Fig.211
Fig.212

Fig.213
Fig.214
Fig.215
Fig.216

Fig.217
Fig.218
Fig.219
Fig.220

Fig.221
Fig.222
Fig.223
Fig.224

Fig.225
Fig.226
Fig.227
Fig.228

Fig.229
Fig.230
Fig.231
Fig.232

Fig.233
Fig.234
Fig.235
Fig.236

Fig.237
Fig.238
Fig.239
Fig.240

Fig.241
Fig.242
Fig.243
Fig.244

Fig.245
Fig.246
Fig.247
Fig.248

Fig.249
Fig.250
Fig.251
Fig.252

Fig.253
Fig.254
Fig.255
Fig.256